

SIZE: 115x165mm

MAGNAVOX

WATERPROOF PORTABLE SPEAKER with Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3628

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure...

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation.

FCC NOTICE: To assure continued compliance, follow the attached installation instructions and use only shielded cables when connection to other devices.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

- 1. Read these instructions All the safety and operating instructions should be read before the product is operated.

- 2. Keep these instructions The safety and operating instructions should be retained for future reference.

- 3. Heed all warning All warnings on the product and in the operating instructions should be adhered to.
4. Follow all instructions All operating and use instructions should be followed.
5. Do not use this apparatus near water Do not use the product near water and moisture.

- 6. Clean only with dry cloth Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.

- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.

- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

 
- 15. Power Source The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.

- 16. Power lines An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

- 17. Overloading Do not overload wall outlets and extension cords as this can result in a risk or fire or electric shock.

- 18. Object and liquid entry Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.

- 19. Outdoor antenna grounding If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.



- 20. Service Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

- 21. Replacement parts When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer of those that have the same characteristics as the original part.

- 22. Safety check Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.

- 23. Wall or ceiling mounting The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

- 24. Damage requiring service Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.

 
- e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance—this indicates a need for service.

- 25. Note to CATV system installer This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding, and in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Note: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

POWER SOURCE:


- The unit has a built in Li-ion rechargeable battery, recharge it before use or when it is drained as follows:
1. Open the Rubber Cover on the top unit. (This cover is for water and dusts Ingress Protection, always make sure it is completely close.)
2. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port.
3. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the supplied USB Charger to start charging.

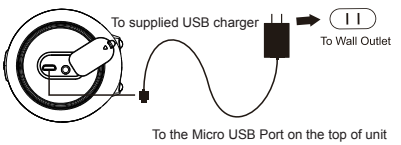

Notes:

- Your battery will last longer if you're following these simple guidelines for charging and storing.
A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
B. Recharge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).
C. Do not charge longer than 24 hours. Excessive charging or running the unit until battery fully drains will damage battery.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

 LOCATION OF CONTROLS:

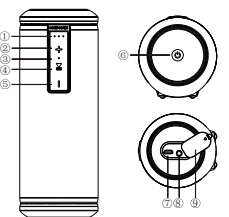

- 1. LED Indicator
2. + Button
3. Built-in Microphone
4. - Button
5. - Button
6. Power ON/OFF Button
7. Micro USB Port (For charge only)
8. AUX IN Jack
9. Rubber Cover (This cover is for water and dusts Ingress Protection, always make sure it is completely closed)

OPERATION:

BT (Bluetooth) pairing:

- First time use or re-pairing the unit to a new BT Device, pair as follows:
1. Power on the unit by pressing and holding the 0 Button on the bottom of the unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the unit will sound a prompt tone and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT Device.
4. During playback:
• Press the || Button on the unit to pause, press again to resume normal playback.
• Press and holding the + or - Buttons to adjust volume level as desired.
• Press and release the + or - Buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the || Button to pause the music playback then speak to the built-in microphone to answer the call. When your call is complete, press the || Button to disconnect or end the call and resume to music playback.
6. When finished listening, press and hold the 0 Button to shut off the unit.

Notes:

 
- When the external BT Device searched the unit, our model number "MMA3628" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- 1. Power on the unit by pressing and holding the 0 Button on the bottom of the unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
2. Wait a few seconds until the unit is automatically paired to the external BT Device. (The Blue Indicator will stop blinking).
3. After pairing is complete you may now play music and answer calls with your external BT Device.

AUX (in):

- To listen from an external Audio Player such as a MP3 Player, Discman ...etc.
1. Open the Rubber Cover on the top of unit. (This cover is for water and dusts Ingress Protection, always make sure it is completely closed after open).
2. Connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
3. In power on mode, connect the other end of the cable to the AUX (in) Jack as the figure below. The unit will turn to AUX IN mode automatically. The Green AUX (in) Indicator will illuminate.

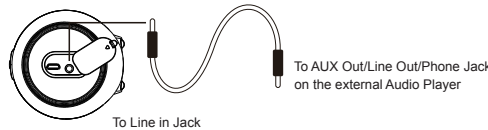

- 4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
• Press the || Button to mute the sound, press again to turn the sound back.
• Press and holding the + or - Buttons to adjust volume level as desired.
6. When no longer in use, press and hold the 0 Button to shut off the unit.

Note: If the Audio Connection Cable was plugged into the AUX (in) Jack, the Bluetooth function will auto cut. Unplug the Cable from the AUX (in) Jack before use Bluetooth function.

TROUBLESHOOTING:

Table with 3 columns: Problem (e.g., Can't power on, No sound or sound weak, Sound distortion, BT not functioning), Cause (e.g., Built in battery drained, Volume of the unit was set to minimum position), Solution (e.g., Recharge the built-in battery as page 3, Increase the volume by press and hold the + Button).

GENERAL SPECIFICATION:

Table with 2 columns: Specification (e.g., Power Source, BT Version, BT Effective range, Audio Power, Impedance of speaker) and Value (e.g., Built-in DC 3.7V, 2000 mAh(7.4Wh) Li-ion rechargeable battery, 4.1, Up to 32 feet in open area, 5 Watts Per channel (Total 10 Watts RMS), 2 x 6 W, 4 ohm).

ACCESSORIES:

- 1 x User's Manual
1 x USB Connection Cable (For charge only)
1 x Audio Connection Cables with 3.5mm Plugs
1 x AC/USB Adapter (Input: AC 100-240V~; 50/60Hz; 0.2A Max; Output: DC 5V; 1000mA)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc.

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: service@craigelectronics.com

Printed in China

MMA3628\_WC\_E0FK1\_B0WU