MAGNAVOX

STEREO SPEAKER with Bluetooth® Wireless Technology

Size: 142(W) x 210(H)mm (A5)

LEASE READ BEFORE OPERATING THIS EQUIPMEN

IMPORTANT SAFETY INSTRUCTIONS

PARTS INSIDE. REFER SERVICING TO QUALIFIED

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to

NOTE: This equipment has been tested and found to comply with the limits for a Class E digital device, pursuant to Part 15 of the FC0 Rules. These limits are designed to provide easonable protection against harmful interferer n a residential installation. This equipment enerates, uses, and can radiate radio frequency accordance with the instructions, may cause harmful interference to radio communication wever, there is no guarantee that interference

- or television reception, which can be d by turning the equipment off and
- equipment and receiver.
- circuit different from that to which the receiver

9. Do not defeat the safety purpose of the polarized or

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

2. Keep these instructions

not occur in a particular installation. If the

Increase the separation between the

Consult the dealer or an experienced radio/

bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

s on the product and in the operating instructions

- se liquid cleaners or aerosol cleaners. Use a di
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- by placing the product on a bed, sofa, rug or c
- proper ventilation is provided or the manufacture 8. Do not install near any heat sources such as radiators,

the manufacturer.

heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or

or has been dropped.

- 4. Follow all instructions
- 5. Do not use this apparatus near water
- 6. Clean only with dry cloth
- erence by one or more of the following Reorient or relocate the receiving antenna
- Connect the equipment into an outlet on a

rounding-type plug. A polarized plug has two blades th one wider than the other. a grounding type plug as two blades and a third grounding prong, the wide ade or the third prong are provided for your safety. e provided plug does not fit into your outlet, consu

an electrician for replacement of the obsolete outlet. 10. Protect the power cord from being walked on or pinched

particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified b

to qualified service personnel.

13. Unplug this apparatus during lightning storms or wher unused for long periods of time.

14. Refer all servicing to qualified service personnel. plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been

The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home consult your appliance dealer or local power company For products intended to operate from battery power, or other sources, refer to the operating instructions.

the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

Do not overload wall outlets and extension cords as this can result in a risk or fire or electric shock.

18. Object and liquid entry Never push objects of any kind into the product through

as they may touch dangerous voltage points or short ou

against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information

grounding electrodes and requirements for the grounding

dangerous voltage or other hazards. Refer all servicing

. Connect the small plug from the supplied USB Connection Cable to the DC IN Jack (Micro

exposed to rain or moisture does not operate normally,

An outside antenna system should not be located in

extensive work by a qualified technician to restore the

with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antennadischarge product, connection to

When replacement parts are required, be sure the service

as the original part. Unauthorized substitutions may resu in fire or electric shock or other hazards.

Ipon completion of any service or repairs to this product

as recommended by the manufacturer. Inplug the product from the wall outlet and refer

. When the product exhibits a distinct change in

parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection

Do not attempt to service this product yourself as opening or removing covers may expose you to

technician uses replacement parts specified by the nanufacturer or those that have the same characteristic

The product should be mounted to a wall or ceiling only

When the power-supply cord or plug is damaged

product to its normal operation.

5. Note to CATV system installer

USB Port) on the right side of unit. the supplied AC/USB Adaptor.

If the product does not operate normally by following th Adjust only those controls that are covered by t operating instructions, as an adjustment of othe

performance - this indicates a need for service This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC tha

Battery Recharging:

Connect the full size USB plug from the supplied USB Connection Cable to the USB Port on

sk the service technician to perform safety checks to

I. During charging, the Red Charging Indicator on the front of unit will illuminate. When finished

If liquid has been spilled or objects have fallen into the This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.

controls may result in damage and will require

If the product has been dropped or the cabinet has been

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged any way sucl as the following: the power-supply cord or plug has been

The unit has a built-in Li-ion rechargeable battery, recharge it before first time use or when needed

etermine that the product is in proper operating conditi

ervicing to qualified service personnel under the

the product has been exposed to rain or water To save energy, unplug the AC/USB Adaptor from the wall outlet if you will not use it for an extended period of time. During charging, you can also play and listen music at the same time.

our battery will last longer if you follow these simple guidelines for charging and storing.

is fully drained will damage the battery. Battery life will be extended if you keep the battery fully

provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be close to the point of cable entry as practical.

LOCATION OF CONTROLS

1. Standby/BT Indicators

3. POWER ON/OFF switch

VOL (Volume) + butto

6. VOL (Volume) - buttor

8. LINE IN jack

 
7. USB port (For DC IN)

2. Charging Indicator

charging, it will turned off.

A. Before first time use, recharge the unit approximately 4 hours until the unit is fully recharged. 3. Recharge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F). C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery

D. Battery life naturally shortens slowly over time. E. The rechargeable battery incorporated in this product is not user replaceable.




damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

3. Connect the AC/USB Adaptor to wall outlet having AC 100-240V~, 50/60Hz as illustrated below:

LOCATION OF CONTROLS - REMOTE CONTROL

5. Do not try to recharge non-chargeable batteries. It can overheat and rupture. (Follow battery manufacturer's instructions.)

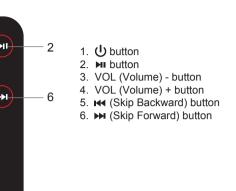

BATTERIES INSTALLATION (REMOTE CONTROL

To replace the button cell

figure on the right.

Close the battery tray.

with fresh ones.

1. Push the tab, then slide out the battery tray as the

button cell as the polarity markings on the remote

1. Use only the size and type of battery specified.

Follow these Battery Precaution when using a battery in this device:

compartment. A reversed battery may cause damage to the device.

2. Replace the old button cell by a new CR 2025

BATTERY PRECAUTIONS

For fist time use, slide the insulation film from the battery door and discard it as in the figure below:

 
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery

3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries

4. If the batteries in the device are consumed or the device is not to be used for a long period of

time, remove the batteries to prevent damage or injury from possible battery leakage.

EFFECTIVE DISTANCE OF REMOTE TRANSMIT



. Clean the battery contacts and also those of the device prior to battery installation.

swallowed or placed inside any part of the body, seek immediate medical attention.

8. MThis product contains a coin/button cell battery. If the coin/button cell battery is swallowed,

6. Do not dispose of battery in fire. Battery may explode or leak.

 When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the REMOTE SENSOR of the unit, the remote





 
operation may be unstable.

Remote Control repeatedly to skip tracks.

BT (BLUETOOTH):

BT PAIRING:





3. Power on the external BT Device and enter to BT searching mode. Start pairing following the on

1. Slide the POWER ON/OFF Switch on the right side of unit to ON position to turn the unit to Standby

- screen instructions from the external BT Device. After paired, the Blue Indicator will stop blinking. 4. Play the music on the paired BT Device as usual. sound temporary, press again to resume. During playback:
- press again to resume normal playback. Press and hold the VOL (Volume) +/- Buttons on the unit or press and release the VOL (Volume) +/- Buttons on the Remote Control to adjust volume level as desired.
- 6. To shut off the unit, press and hold the \circlearrowleft Button on the unit or press the \circlearrowleft Button on the Remote Control. The color of the Standby/BT Indicator will turns to Red.

Press and release the VOL (Volume) +/- Buttons on the unit or press the I◄ / ▶► Buttons on the

Press and release the
 Ü Button on the unit or the ►IIButton on the Remote Control to pause

- Make sure the Line In Connection Cable is NOT plugged in the LINE IN Jack, Otherwise, BT will
- not functioning. Unplug it from the LINE IN Jack before using BT. For saving electricity, slide the POWER ON/OFF switch to OFF position and unplug the
- AC/USB Adaptor from wall outlet if you will not use the unit for an extended period of time it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries When the external BT Device searched the unit, our model number "MHT913R" will appear on the
- away from children. If the battery compartment does not close. If you think batteries might have been display of external BT Device. Pairing code "0000" or "1234" may need to be entered.

Normal operation after paired:

Press and hold the (1) Button on the unit or press the (1) Button to power on the unit from Standby Mode. The Blue BT Indicator on the front of unit will illuminate and blink. 2. Wait a few seconds until the unit is automatically paired to the external BT Device. (The Blue

Indicator will stop blinking). B. Plays the music in the paired BT Device as usual.

Connect the Headphone/Earphone; AUX out; Line out jacks

LISTENING FROM LINE IN JACKS

- from the external audio player (such like MP3 player; Discman . . . etc) to the LINE IN jacks on the unit by the supplied Line In Connection Cable as the figure on right: 2. Slide the POWER ON/OFF Switch on the right side of unit to ON
- position to turn the unit to Standby Mode. The Red Standby/BT Indicator on the front of unit will illuminate. Press and hold the UButton on the unit or press the UButton on the Remote Control to power on the unit from Standby Mode The Blue Standby/BT Indicator on the front of unit will illuminate
- Note: If unplug the Line In Connection Cable from the Line In Jack. The unit will turn to BT mode automatically and the color of STANDBY Indicator will turns to blue.
- Press the VOL +/- buttons to adjust volume levels as desire. Press the ▶I button on the Remote Control to mute the
- When no longer in use, press and hold the Ubutton on the unit or press the (1) button on the Remote Control to turn the unit to standby mode. NOTE: To saving the electric power, slide the POWER ON/OFF switch to OFF position and

unplug the AC/USB Adaptor from wall outlet if long period of time will not use.

TROUBLESHOOTING

Check the following before requesting service:

Volume level too high

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built in battery consumed	Recharge the battery as page 3
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume by press and hold the VOL + Button on the unit or press the VOL + Button on the Remote Control
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device

The external BT device too far from the unit

BT Version:....

BT Operation Distance:..

Sound distortion

...Built-in DC === 3.7V, 1000mAh (3.7WH) rechargeable

....96 Feet in opera area

1 x AC/USB Adapter (Input: AC 100-240V~ 50/60Hz: 0.4A. Output: DC ===5V. 1500mA)

The external BT Device had NOT paired to the unit Pair the external BT Device to the

Li-ion Battery, Recharge by DC===5V, 1500mA through Micro USB Port Impedance of the speakers: ..2 x 5W: 4ohm .2 x 3W (Total 6W RMS) Audio power:....

plume level of the connected/paired device too

PACKAGE INCLUDES:

1 x User's Manual 1 x Remote Control (Uses 1 x CR2025 Button Cell, included)

1 x Audio Connection Cables with 3.5mm Plugs 1 x USB Connection Cable (For Charging only)

SPECIFICATIONS

Maintenance

Reduce the volume level by press

and hold the VOL - Button on the

unit or press the VOL - Button on

Reduce the volume level of the

ected/paired device

Place the external BT device close

ne Remote Control

2. Do not attempt to disassemble your product. 3. Do not paint your product. 4. Do not drop, throw or try to bend your product. 5. Do not expose your product to open flames.

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in 1. Do not use harsh or abrasive cleaning agents or solvents. material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money

> Craig Electronics Inc 1160 NW 163 Drive

Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc.

repaired, replaced or if the unit can not be repaired or replaced, a refund will be

Miami, FI 33169

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's

This warranty is not transferable and only applies to the original purchase. Any implied

warranties, including the warranty of merchantability, are limited in duration to the period

of this expressed warranty and no warranty whether expressed or implied shall apply to

forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product, c) Any cost incurred in shipping the product for repair, d Damage to the product not used in the USA.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these

Electronics Inc. and Craig Electronics Inc. is the warrantor in relation to this product MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

email:service@craigelectronics.com

To Obtain Service on your Product

This product has been manufactured by and is sold under the responsibility of Craig

the product thereafter.

restrictions may not apply to you.

MHT913R WC E0FG1 B0WU