

SIZE: 70x158mm

MAGNAVOX

PORTABLE SPEAKER with RGB Color Changing Light and Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3685

FCC NOTICE:

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS:

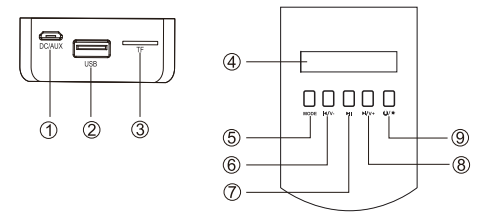


- 1. 5V/AUX (In) PORT (For Charge and Aux/Line In)
2. USB Port
3. Micro SD Card Slot
4. LED Display
5. MODE Button
6. M/V- Button
7. M Button
8. M/V+ Button
9. Power On-Off/Decorative Light On-Off Button

POWER SOURCE:

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 - 1. Connect the Micro USB Plug from supplied Connection Cable to the 5V/AUX (In) Port on the top of unit.
2. Connect the full size USB Plug from supplied Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).

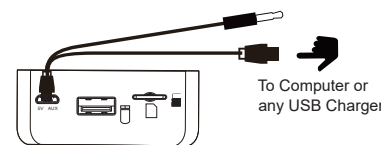

- 3. When charging, the Red Charge Indicator inside the 5V/AUX (In) PORT will illuminate. When charging is complete, it will turn off.
4. During charging, you can also play and listening music at the same time.

Notes:

- Your battery will last longer if you following these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).

- C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

- 1. Recharged the built-in Li-ion battery as previously instructed.
2. Press and hold the Power On-Off/Decorative Light On-Off Button until the LED Display illuminate to power on the unit.
3. Press the MODE Button repeatedly to switch to desired playback mode. The unit will display with your selection (see list below):

Table with 2 columns: Playback Modes and Showing on Display. Rows include BT (Bluetooth), TF (Micro SD) Card, USB, and Line In (AUX In).

Note: If the Micro SD Card and/or USB Device had NOT inserted/installed into the unit, the correspondence selection will not available.

- 4. During playback, press and release the M/V- or M/V+ buttons repeatedly to adjust volume level as desired.
5. Press the Power On-Off/Decorative Light On-Off Button to turn off the Decorative LED Lights; press again to turn it back.
6. When finished listening, press and hold the Power On-Off/Decorative Light On-Off Button to shut off the unit.

BT Mode:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

- 1. Power on the unit and enter to BT mode as previously instructed. The "bBLUE" will appear on the display and blink.

- 2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt voice "bBLUE" appeared on the display will stop blinking.

- 3. If pairing is complete you may now play music with your external BT Device.

- 4. During playback:
• Press the M Button to pause, press again to resume normal playback.
• Press and hold the M/V- or M/V+ Buttons to skip tracks.
• Press and release the M/V- or M/V+ Buttons repeatedly to adjust volume level as desired.

- 5. When finished listening, press and hold the Power On-Off/Decorative Light On-Off Button to shut off the unit.

Notes:

- When the external BT Device searched the unit, our model number "MMA3685" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

 
Normal operation after pairing:

- 1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. "bBLUE" will appear on the Display.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt voice.
4. After pairing is complete you may now play music with your external BT Device.

Micro SD Card:

To play the music in Micro SD Card:

- 1. In power off mode, insert the Micro SD Card (not included) into the Micro SD Card Slot on the top of unit with contacts facing up as illustrated below:




- 2. Power on the unit and enter to USB mode as previously instructed:
• "USB" will appear on the display.
• Indicator "USB" on the display will illuminate.
• Music in the USB will be playback automatically.
3. During playback:
• Press the M Button to pause, press again to resume normal playback.
• Press and hold the M/V- or M/V+ Buttons to skip tracks.
• Press and release the M/V- or M/V+ Buttons repeatedly to adjust volume level as desired.

USB:

To play the music in USB Device:

 - 1. In power off mode, connect the USB Device into the USB Port on the top of unit as illustrated below:

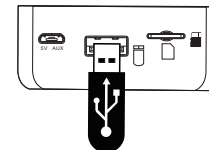

- 2. Power on the unit and enter to USB mode as previously instructed:
• "USB" will appear on the display.
• Indicator "USB" on the display will illuminate.
• Music in the USB will be playback automatically.
3. During playback:
• Press the M Button to pause, press again to resume normal playback.
• Press and hold the M/V- or M/V+ Buttons to skip tracks.
• Press and release the M/V- or M/V+ Buttons repeatedly to adjust volume level as desired.
4. When finished listening, press and hold the Power On-Off/Decorative Light On-Off Button to shut off the unit.

 
Notes:

- Up to 16 GB Micro SD Card/USB Device the unit supports to play.
• When inserting the Micro SD Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the Micro SD Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
• Before replacing Micro SD Card/USB Device, make sure the unit has been powered off.
• You also need to download the desired music in MP3 format into the Micro SD Card/USB Device before insert into the unit.

AUX/LINE IN:

To listen from an external Audio Player such as MP3 Player, Discman...etc.


- 1. In power off mode, connect the Round Plug from supplied Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the Micro USB Plug from the supplied Connection Cable to the 5V/AUX (In) Port on the top of unit as illustrated below:

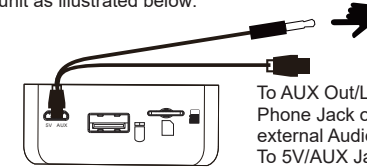

- 3. Power on the unit and enter to AUX/LINE IN mode as previously instructed. "LnE" will appear on the Display.
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
• Press the M Button to mute, press again to turn the sound back.
• Press and release the M/V- or M/V+ Buttons repeatedly to adjust volume level as desired.
6. When finished listening, press and hold the Power On-Off/Decorative Light On-Off Button to shut off the unit.

Detachable Shoulder Strap:

 Buckle up 2 sides of the strap to the hole on the unit, then you can put the strap on your shoulder.

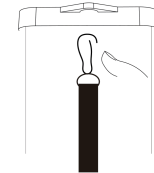

TROUBLE SHOOTING GUIDE:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, and POSSIBLE SOLUTION. Rows include 'Can't power on', 'No sound or sound weak', and 'Sound distortion'.

SPECIFICATIONS:

Table with 2 columns: Specification Name and Value. Rows include Power Source, Impedance of Speakers, Audio Power, BT Version, and BT Operation Distance.

PACKAGE INCLUDES:

- 1 x Owner's Manual
1 x Connection Cable (For charge and Aux/Line In)
1 x Detachable shoulder strap

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$12 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com