

SIZE: 70x158mm

MAGNAVOX

WATERPROOF SPEAKER
with Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3743

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS

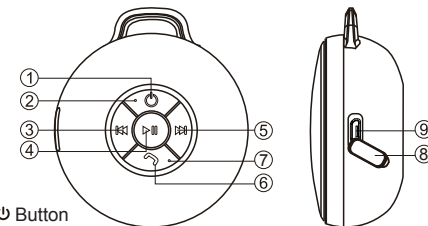


1. Power Button
2. Indicators
3. Play/Pause Button
4. Previous/Next Button
5. Volume Buttons
6. Call Button
7. Microphone
8. Rubber Cover
9. Micro USB Port (For charging only)

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

1. Open the Rubber Cover above the Micro USB Port.
2. Connect the small plug from the supplied USB Connection Cable to the Micro USB Port on the unit.
3. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
4. When charging, the Red Indicator on the front unit will illuminate. When charging is complete, it will stop illuminating.
5. When finished charging, close the Rubber Cover.

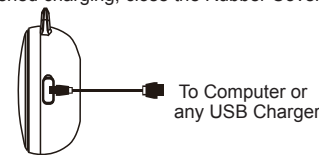

NOTES:

1. The Rubber cover is for water and dusts Ingress Protection; always make sure it has been completely closed.

2. When charging, you can also play and listen to music at the same time.

IMPORTANT:

- Your battery will last longer if you follow these simple guidelines for caring and storing:
- A. Before first time use, recharge the unit approximately 2 hours until the unit is fully charged.
 - B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
 - C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
 - D. Battery life naturally shortens slowly over time.
 - E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Press and holding the Power Button approximately 1 second to power on the unit. The Blue Indicator on the front of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT Device.
4. During playback:
 - Press the Play/Pause Button to pause, press again to resume normal playback.
 - Press and release the Previous/Next buttons repeatedly to adjust volume level as desired.
 - Press and hold the Previous/Next buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone:
 - If a call is incoming during an active music session:
 - Press the Call Button then speak to the Microphone to answer the call. When your call is complete, press the Call Button to disconnect or end the phone call and resume to music playback.
 - Or, press and hold the Call Button approximately 1 second to decline the incoming phone then resume to music playback.

- Quick press the Call Button twice to redial the last telephone number your cell phone had dialed.
6. When finished listening, press and holding the Power Button approximately 1 second to shut off the unit. The Blue Indicator will shut off.

Notes:

- When the external BT Device searches for the unit, our model number "MMA3743" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. The Blue Indicator on the unit will illuminate and blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The Blue Indicator will stop blinking.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

TROUBLE SHOOTING GUIDE

Check the following before requesting service:

| SYMPTOM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|------------------------|---|---|
| Can't power on | Built-in battery drained | Recharge the battery as page 2 |
| | The unit in power off mode | Press and hold the Power Button to power on the unit. The Blue Indicator on the front of unit will illuminate |
| No sound or sound weak | Volume of the unit was set to minimum position | Increase the volume level by press and release the Volume Up Button repeatedly |
| | Volume level of paired device is in low level | Rise the volume level of the paired device |
| Sound distortion | Volume level too high | Reduce the volume level by press and release the Volume Down Button repeatedly |
| | Volume level of the paired device too high | Reduce the volume level of the paired device |
| BT not functioning | The external BT device had NOT paired to the unit | Pair the external BT device to the unit as page 3 |
| | The external BT device too far from the unit | Place the external BT device close to the unit |

SPECIFICATIONS

| | |
|---------------------------------------|---|
| Power Source | Built-in DC 3.7 V, 400 mAh (1.48 WH) rechargeable Li-Ion Battery; recharge by DC 5 V through Micro USB Port |
| Impedance of Speakers | 3 W, 3 ohm |
| Audio Power | 2 W (RMS) |
| BT Version | 4.1 |
| BT Operation Distance | ≤ 32 Feet in open area |
| Dust & Water Ingress Protection Level | IP44 |

PACKAGE INCLUDES

- 1 x Owner's Manual
- 1 x USB Connection Cable (For Charging only)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33269

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART, VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

MMA3743_WC_E0FK1_B0US