

CODE LIST

Brand of TV (Device Selection Buttons: TV Button)	Codes:
Admiral	0129,0130
Advent	0036
Akai	0102,0117,0034,0090
AOC	0058,0063,0093,0096,0024
Apex Digital	0133,0037,0049,0020
Audiovox	0127,0044,0080,0081,0087,0099
Aventura	0040
Broksonic	0130,0090
Carver	0123
Celebrity	0043
Celera	0037
Changhong	0037
Citizen	0132,0090
Coby	0067,0009,0011,0134,0135,0014
Commercial Solutions	0122,0100
CRAIG	0012,0013
Crosley	0043,0123
Curtis	0015,0023
Curtis Mathes	0100,0123,0127,0129,0132,0034,0039,0041
Daewoo	0127,0041
Dell	0119
Denon	0039
Dumont	0124
Durabrand	0130,0038,0040
Dynex	0042,0094,0002
Electroband	0043
Electrograph	0116
Electrohome	0130,0071
Element	0073,0088,0001
Emerson	0114,0127,0130,0038,0040,0041,0059,0070,0091
Emprex	0060
Envision	0058,0063,0093,0096
ESA	0102,0040,0091
Funai	0043,0040,0091
Gateway	0116
GE	0121,0122,0100,0126,0127,0038
GFM	0040,0070,0091,0000
Gibraltar	0124
GoldStar	0038
Haier	0078,0079,0010
Hallmark	0038
Hannspree	0056
Harman/Kardon	0123
Havermy	0129
Hello Kitty	0127
Hisense	0133,0069,0097,0016
Hitachi	0111,0039
Ilo	0059,0070,0072

Infinity	0123
Insignia	0103,0120,0130,0040,0069,0074,0089,0091,0094
Inteq	0124
JBL	0123
JCB	0043
Jensen	0036
JVC	0130,0035,0051,0065,0082,0007
KDS	0061,0073
KLH	0037
LG	0103,0122,0124,0038,0017,0021,0026,0027
LXI	0100,0123,0125,0038
MAG	0061,0073
Magnavox	0110,0115,0116,0123,0126,0040,0044,0058,0086,0091 0018
Marantz	0110,0123
Matsushita	0106
Maxent	0116
MB Quart	0087
Megatron	0038,0039
Memorex	0130,0131,0038,0071,0089
MGA	0131,0038
Midland	0100,0124,0126
Mitsubishi	0128,0129,0131,0038
Motorola	0129
MTC	0132
NAD	0125,0038
NEC	0084
NetTV	0116
Nexus Electronics	0001
Nikko	0038
Norcent	0133,0058,0063
Olevia	0113,0050,0055
Optimus	0106
Optoma	0056
Optonica	0129
Orion	0130,0042
Panasonic	0105,0106,0109,0126,0053,0007
PARK	0098,0004
Penney	0100,0125,0126,0132,0038
Petters	0118
Philco	0123,0040,0059,0070,0091
Philips	0110,0115,0123,0077,0086,0018,0019
Pioneer	0109
Polaroid	0118,0037,0052,0061,0073,0080,0081,0099
Portland	0127,0041
Prima	0036
Prism	0126
Proscan	0122,0100,0006
Proton	0038
Proview	0061,0073
Pulsar	0124
Quasar	0106,0126

RadioShack	0100,0038
RCA	0121,0122,0100,0126,0129,0041,0083,0003,0005,0 022 0028
Realistic	0038
Runco	0124
Sampo	0116
Samsung	0102,0132,0034,0038,0047,0095,0031,0032,0033
Sansui	0130,0040,0071,0089,0090
Sanyo	0123,0048
Sceptre	0045,0049,0057,0064,0025
Scotch	0038
Scott	0038,0075
Sears	0100,0123,0125,0038,0040
Sharp	0107,0129
Sheng Chia	0129
Signature	0123
Sony	0101,0043,0029,0030
Soundesign	0038
Soyo	0085
Spectroniq	0061,0073
Squareview	0040
Superscan	0129
Supreme	0043
SVA	0133,0091
Sylvania	0114,0123,0040,0059,0070,0088,0091
Symphonic	0040
Syntax	0113,0050,0055
Tandy	0129
Technics	0106,0126
Techwood	0126
Teknika	0123,0131,0132
Telefunken	0034
TMK	0038
TNCi	0124
Toshiba	0108,0125,0132,0053,0090,0092
TVS	0130
Victor	0035
Vidikron	0123
Vidtech	0038
Viewsonic	0116,0046,0054,0058,0062,0066,0068,0076,0093,0 096 0008
Viore	0072,0098,0015
Vizio	0104,0046
Wards	0043,0100,0123,0124,0125,0126,0132,0038
Waycon	0125
Westinghouse	0112,0127,0046,0049
White Westinghouse	0130,0041
Wyse	0058
Zenith	0043,0103,0100,0124,0130,0038,0039,0041,0058

Brand of VCR (Video Cassette Recorder; Device Selection Buttons: VCR Button)	Codes:
Accurian	0495
Admiral	0485
Adventura	0495
Aiko	0493
Aiwa	0484,0495
Allegro	0486
America Action	0493
American High	0482
Audiovox	0484,0493
Calix	0484
Canon	0482
Carver	0487
CCE	0493
Citizen	0484,0493
Craig	0484
Crosley	0487,0495
Curtis Mathes	0479,0482,0483,0493
Daewoo	0489,0493
Denon	0490
DirectTV	0480
Durabrand	0486,0494
Dynatech	0495
Electrohome	0484,0492
Electrophonic	0484
Emerex	0481
Emerson	0484,0495,0492,0493,0497
Fuji	0482,0488
Funai	0495,0497
Garrard	0495
GE	0479,0482
GFM	0497
GoldStar	0484,0494
Gradiente	0495
Harley Davidson	0495
Harman/Kardon	0487,0494
Headquarter	0496
Hitachi	0495,0490
Hughes Network Systems	0490
Humax	0480
Instant Replay	0482
JVC	0491
KEC	0484,0493
Kenwood	0491,0494
Kodak	0482,0484
Lloyd's	0495
LXI	0484
Magnavox	0482,0486,0487,0495,0497
Marantz	0482,0487
Marta	0484

Matsushita	0482,0483
MEI	0482
Memorex	0482,0483,0484,0485,0486,0495,0496
MGA	0492
Minolta	0490
Mitsubishi	0491,0492
Motorola	0482,0485
MTC	0495
Multitech	0495
NEC	0491,0494
Nikko	0484
Olympus	0482
Optimus	0483,0484,0485
Panasonic	0482,0483
Penney	0482,0484,0490,0494
Pentax	0490
Philco	0482
Philips	0480,0482,0487
Pilot	0484
Pioneer	0491
Polk Audio	0487
Portland	0493
Presidian	0497
Proscan	0479
Pulsar	0486
Quarter	0496
Quartz	0496
Quasar	0482,0483
RadioShack	0495
Radix	0484
Randex	0484
RCA	0479,0482,0490
Realistic	0482,0484,0485,0495,0496
Runco	0486
Samsung	0489
Sanky	0485,0486
Sansui	0495,0491
Sanyo	0496
Scott	0489,0492
Sears	0482,0484,0495,0490,0496
Sharp	0485
Signature	0482
Sony	0481,0482,0488,0495
STS	0490
Sylvania	0482,0487,0495,0492,0497
Symphonic	0495,0497
Tashiko	0484
Teac	0495
Techniccs	0482,0483
Teknika	0482,0484,0495
Thomas	0495
Tivo	0480

Toshiba	0489,0492
Totevision	0484
Vector	0489
Vector Research	0494
Video Concepts	0489
Videomagic	0484
Villain	0495
Wards	0479,0482,0485,0486,0487,0488,0489,0495,0490,0494 0496
XR-1000	0482,0495
Yamaha	0494
Zenith	0484,0486,0488,0495
Brand of DVD (Device selection Buttons: DVD/AUX)	Codes:
Accurian	0427
Akai	0428
Allegro	0440
Apex Digital	0405,0437,0442
Bel Canto Design	0456
Blue Parade	0411
Broksonic	0428
California Audio Labs	0406
Cinea	0438
CineVision	0440
Citizen	0428
Craig	0438,0412,0413,0414,0415
CyberHome	0433,0444
Daewoo	0440,0446
Denon	0406,0466,0517
Diamond Vision	0450
Disney	0427,0449
DVD2000	0410
Emerson	0427
Funai	0427
GE	0400,0528
GFM	0427
Go Video	0529,0429,0430,0440
GoldStar	0430,0440
Grundig	0522
Harman/Kardon	0447
Hello Kitty	0438
Hitachi	0408,0531
Hiteker	0405
iLo	0451
Insignia	0427,0462,0471,0477,0499,0507
Integra	0411,0532,0463
JVC	0527,0439,0445,0457,0469,0509
Kenwood	0406,0526
LG	0430,0440,0457,0515,0504
Magnavox	0407,0522,0525,0427,0452,0454,0513
Marantz	0522
McIntosh	0402

Memorex	0428,0438,0449,0464,0508
Microsoft	0400
Mitsubishi	0409,0410
NAD	0430
Olevia	0468
Onkyo	0407,0532,0463,0506
OPPO	0518
Panasonic	0406,0407,0458,0459,0510
Philco	0427
Philips	0407,0522,0523,0524,0525,0427,0448,0452,0454,0472 0512
Pioneer	0411,0423,0426,0456,0473,0519
Polaroid	0442,0450
Polk Audio	0522
Presidian	0427
Proceed	0405
Proscan	0400
RCA	0400,0411,0436,0464
Rio	0440
Rotel	0527
Sampo	0431
Samsung	0406,0408,0424,0435,0461,0470,0475,0503,0505
Sansui	0428
Sanyo	0428,0441
Schneider	0525
Sharp	0530,0427,0431,0465,0502
SHERWOOD	0520
Shisonic	0403
Sonic Blue	0440
Sony	0401,0402,0403,0404,0432,0443,0453,0455,0501
Sylvania	0427,0511
Symphonic	0427
TCL	0514
Technics	0406
Theta Digital	0411
Toshiba	0407,0428,0460,0467,0478,0500
Urban Concepts	0407
Viore	0474
Vizio	0476,0516
Xbox	0400
Yamaha	0406,0522,0525,0425,0434,0521
Zenith	0407,0430,0440
Brand of Satellite (Device Selection Buttons: DBS/CATV)	Codes:
Bell ExpressVu	0202
CRAIG	0212
DirecTV	0201,0203,0200,0204,0205,0207,0208,0211,0214
Dish Network	0202,0209
Dishpro	0202,0209
Echostar	0202,0209
Expressvu	0202

GE	0200
General Instrument	0276
GOI	0202
Hitachi	0211
HTS	0202
Hughes Network Systmes	0205,0207,0208
Jerrold	0276
JVC	0202
Mitsubishi	0207
Motorola	0276,0213
Next Level	0276
Panasonic	0206
Philips	0205,0207,0208,0214
Proscan	0203,0200
RadioShack	0276
RCA	0203,0200,0215
Samsung	0201
Sony	0204
Star Choice	0276
Tivo	0205
Toshiba	0207,0208,0210
Voom	0276
Brand of Streaming Player (Device Selection Bottons: DBS/CATV)	Codes:
A.C.Ryan	0255
Apple	0256
Asus	0257
LG	0258,0259
Magnavox	0260,0261
Netgear	0262,0263
Patriot	0264
Popcorn Hour	0265
RCA	0266,0267,0268
Roku	0269,0270
Seagate	0271
Sony	0272
Western Digital	0273
Xbox	0274
Yamaha	0275
Brand of Cable (Device Selection Bottons: DBS/CATV)	Codes:
Amino	0221,0223
Bright House	0216,0217
Cable One	0216,0217
Cablevision	0216,0217,0219
Charter	0216,0217,0225
Cisco	0217,0224
Comcast	0216,0217,0224,0226
Cox	0216,0217
Digeo	0218,0225
i3 Micro	0221
Insight	0216,0217

Knology	0217
Mediacom	0216,0217
Motorola	0216,0218,0224
Myrio	0221,0223
Pace	0216,0217,0224
Panasonic	0224
Pioneer	0217
RCA	0220
Rogers	0217
Scientific Atlanta	0217
Sejin	0221
Shaw	0216
Sony	0219
Suddenlink	0216,0217
Thomson	0220,0224
Time Warner	0216,0217,0225
Tivo	0226
WideOpenWest	0217
Brand of Video Accessories (Device Selection Buttons: DBS/CATV)	Codes:
Access HD	0231
ADB	0232
Airlink 101	0252
Alpha Digital	0231
Amino	0228,0230,0246
AMTC	0231
Apex Digital	0245
Artec	0251
AT & T	0222
CASTi	0234
Channel Master	0240
Cisco	0237
Coby	0253
Coship	0248
Daewood	0236
Daytek	0234
Digital Stream	0233
Dish Network	0244
Echostar	0244
Epson	0229
GE	0239,0242
Goodmind	0242
Gridlink	0238
Insignia	0227
KoolConnect	0228
Lasonic	0238
LG	0227
Magnavox	0229
Memorex	0247
MicroGEM	0250
Motorola	0222,0241
Philco	0229

RCA	0235,0243
Sansonic	0238
Scientific Atlanta	0222,0237
Sunkey	0254
SureWest	0228
Sylvania	0229
Tivax	0231
Ventura	0243
Venturer	0243
Verizon	0241
Winegard	0243
Zenith	0227
Zentech	0252
Zinwell	0249
Brand of Digital TV Converter Boxes(Device Selection Bottoms:	Codes:
Access HD	0231
Airlink 101	0252
Alpha Digital	0231
AMTC	0231
Apex Digital	0245
Artec	0251
CASTi	0234
Channel Master	0240
Coby	0253
Coship	0248
Daewoo	0236
Daytek	0234
Digital Stream	0233
Dish Network	0244
Echostar	0244
GE	0239,0242
Goodmind	0242
Gridlink	0238
Insignia	0227
Lasonic	0238
Magnavox	0229
Memorex	0247
MicroGEM	0250
Philco	0229
RCA	0235,0243
Sansonic	0238
Sunkey	0254
Sylvania	0229
Tivax	0231
Ventura	0243
Venturer	0243
Winegard	0243
Zenith	0227
Zentech	0252
Zinwell	0249