

SIZE:145*210MM

MAGNAVOX

PORTABLE SPEAKER with Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3717

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

 
FCC STATEMENT

- This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


LOCATION CONTROLS:

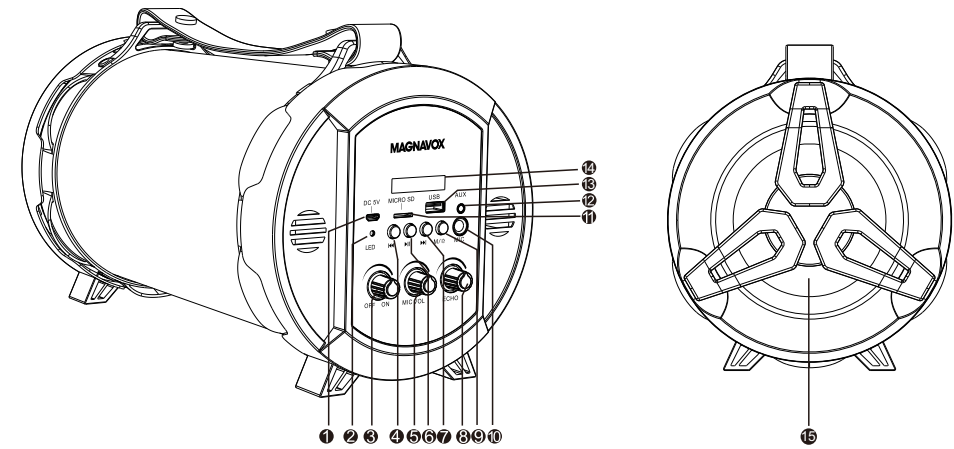

- DC 5V (Micro USB) Port (For charging only)
Red LED Charging Indicator
Power ON-OFF/Knob
Skip Backward Button
MIC VOL (Microphone Volume Control) Knob
Play/Pause Button
Skip Forward Button
ECHO (Microphone Echo Volume Control) Knob
M/Mode/Decorative LED Lights On-Off Button
MIC (Microphone Input) Jack
MICRO SD (TF) Card Slot
AUX (Aux/Line In) Jack
USB Port
LED Display
Speaker with Decorative LED Lights

POWER SOURCE:

 The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:
1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Micro USB) Port on the unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the supplied USB Charger.

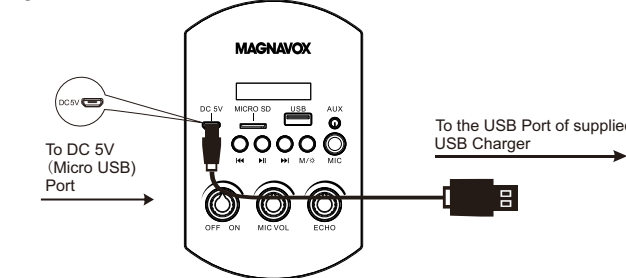

- When charging, the Red LED Charging Indicator on the unit will illuminate. When charging is complete, it will turn off.
When charging, you can also play and listening music at the same time.

NOTES:

- Your battery will last longer if you're following these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 5 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

- Recharge the built-in Li-ion battery as previously instructed.
Turn the Power ON-OFF/Volume Control Knob clockwise to power on the unit and set the volume level as desired. The LED Display and Decorative LED Lights on the speaker will illuminate.
Press the M/Mode Button repeatedly to switch to desired playback mode. The unit will display with your selection (see list below):

Table with 2 columns: Playback Modes and Showing on Display. Rows include USB, Micro SD (TF) Card, FM Radio, AUX (Aux/Line in), and BT (Bluetooth).

Note: If the AUX (Aux/Line in) plug, Micro SD (TF) Card and/or USB Device had NOT been inserted into the unit, the correspondence selection will not be available.

- During playback, turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
Press and hold the M/Mode (Mode/Decorative Light On-Off) Button to turn off the Decorative LED Lights; press and hold again to turn it back.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until Click sound is heard to shut off the unit.

BT Mode:

BT (Bluetooth) pairing: First time use or re-pairing the unit to a new BT Device, pairs as follows:

- Power on the unit and enter to BT mode as previously instructed. "bBLUE" will appear on the display and blink.
Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device. When paired, "bBLUE" on the display will stop blinking.
During playback:
Turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
Press the Play/Pause Button to mute the sound, press again or turning the Power ON-OFF/Volume Control Knob to turn the sound back.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

- Notes:
When the external BT Device searches for the unit, our model number "MMA3717" will appear on the display of external BT Device.
If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- Power on the external BT Device and enter to BT playback mode.
Power on the unit and enter to BT mode as previously instructed. "bBLUE" will appear on the display and blink.
Wait a few seconds until the unit is automatically paired to the external BT Device. "bBLUE" on the display will stop blinking.
After pairing is complete you may now play music with your external BT Device.

FM Radio:

 
- Power on the unit and enter to radio mode as previously instructed. Radio frequency will appear on the display.
In first time use (or relocated the unit to a new location), search and store the available FM stations by press the Play/Pause Button. The unit will automatically to search and store all available FM radio stations then play the first stored FM station. Press the Skip Backward or Skip Forward buttons repeatedly to select and plays the desired stored radio station.
During playback, turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit.

Antennas:

This unit has a built-in FM antenna, which provides adequate reception in most areas. If reception is weak, reassemble the other direction/location to improve reception.

AUX (Aux/Line in):


- Listen from an external Audio Player such as MP3 Player, Discman...etc.
In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
Connect the other end of the cable to the AUX (Aux/Line in) Jack on the unit as illustrated below:

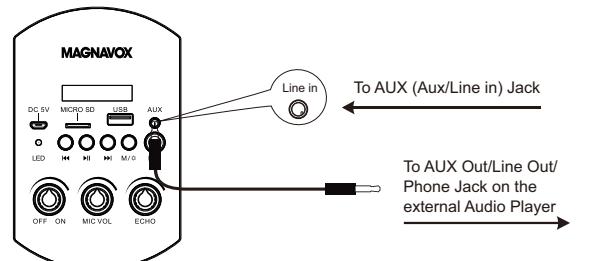

- Power on the unit and enter to AUX (Aux/Line in) mode as previously instructed. "LINE" will appear on the Display.
Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
During playback:
Turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
Press the Play/Pause Button to mute the sound, press again or turning the Power ON-OFF/Volume Control Knob to turn the sound back.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

USB:

 
To play the music in USB Device:
1. In power off mode, connect the USB Device into the USB Port on the unit as illustrated on right:

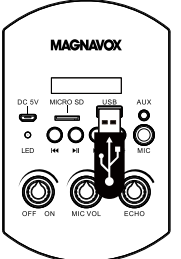

- Power on the unit and enter to USB mode as previously instructed:
"USB" will appear on the display.
Music in the USB Device will be playback automatically.
During playback:
Turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
Press the Play/Pause Button on the unit to pause, press again to resume normal playback.
Press the Skip Backward or Skip Forward buttons repeatedly to skip tracks.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

Micro SD (TF) Card:

 To play the music in Micro SD (TF) Card:
1. In power off mode, insert the Micro SD (TF) Card (not included) into the Micro SD (TF) Card Slot on the unit with contacts facing down as illustrated below:

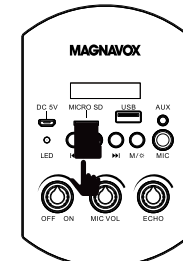

- Power on the unit and enter to Micro SD (TF) Card mode as previously instructed:
"SD" will appear on the display.
Music in the card will be playback automatically.
During playback:
Turn the Power ON-OFF/Volume Control Knob to adjust volume level as desired.
Press the Play/Pause Button on the unit to pause, press again to resume normal playback.
Press the Skip Backward or Skip Forward buttons repeatedly to skip tracks.
When finished listening, turn the Power ON-OFF/Volume Control Knob counterclockwise until "Click" sound is heard to shut off the unit.

Notes:

- Up to 16 GB Micro SD (TF) Card/USB Device supported.
When inserting the Micro SD (TF) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the Micro SD (TF) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
Before replacing Micro SD (TF) Card/USB Device, make sure the unit has been powered off.
You also need to download the desired music in MP3 format into the Micro SD (TF) Card/USB Device before insert into the unit.

To sing with playing music:

- To sing while music is playing:
Power on the unit and plays music in any modes as instructed earlier.
Connect the plug from the Microphone (not included) into the MIC (Microphone Input) Jack on the unit.
Turn the MIC VOL (Microphone Volume Control) Knob to adjust the sound level of microphone as desired.
Turn the ECHO (Microphone Echo Effect Control) Knob to adjust the echo effect of microphone as desired.

Note:

If feedback noise (high audio frequency noise) is hearing from the speaker, turn the Power ON-OFF/Volume Control Knob counterclockwise to reduce the microphone sound level or moving the Microphone away from the speaker.

TROUBLE SHOOTING GUIDE:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, and POSSIBLE SOLUTION. Rows include issues like 'Can't power on', 'No sound or sound weak', 'Sound distortion', 'BT not functioning', and 'Radio reception not good'.

GENERAL SPECIFICATIONS:

Table with 2 columns: Specification Name and Value. Rows include Power Source, Impedance of Speakers, Audio Power, FM Radio Frequency, BT Version, and BT Operation Distance.

PACKAGE INCLUDES:

- 1 x Owner's Manual
1 x USB Connection Cable (For Charging only)
1 x USB Charger (Input: AC 110-240V~, 50/60Hz, 0.4A; Output: DC=5V, 1A, 5-pin)
1 x Audio Connection Cable with 3.5 mm plugs
SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33269

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.
Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

MMA3717_WC_E0FK1_B0US