

SIZE: 115x165mm

MAGNAVOX

PORTABLE SPEAKERS with NFC and Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3630

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

- 1. Read these instructions. All the safety and operating instructions should be read before the product is operated.
2. Keep these instructions. The safety and operating instructions should be retained for future reference.

- 3. Heed all warnings. All warnings on the product and in the operating instructions should be adhered to.
4. Follow all instructions. All operating and use instructions should be followed.
5. Do not use this apparatus near water. Do not use the product near water and moisture.
6. Clean only with dry cloth. Unplug this product from the wall outlet before cleaning.
7. Do not block any ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus.
9. Do not defeat the safety purpose of the polarized or grounding-type plug.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.

- 15. Power Source. The product should be operated only from the type of power source indicated on the marking label.
16. Power lines. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits.

- 17. Overloading. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
18. Object and liquid entry. Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.

- 19. Outdoor antenna grounding. If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

- 20. Service. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
21. Replacement parts. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer.

- 22. Safety check. Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.
23. Wall or ceiling mounting. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

- 24. Damage requiring service. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance - this indicates a need for service.

- 25. Note to CATV system installer. This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding, and in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

- 26. Service. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
27. Replacement parts. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer.

 
- 28. Safety check. Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.
29. Wall or ceiling mounting. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

- 30. Service. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
31. Replacement parts. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer.

- 32. Safety check. Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.
33. Wall or ceiling mounting. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

POWER SOURCE:


- 1. Connect the Micro USB Plug from the supplied USB connection Cable to the Micro USB Port on the rear of the unit.
2. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the supplied USB Charger.
3. Do not charge longer than 24 hours. Excessive charging or running the unit without battery fully drains will damage battery.



NOTES:

- Your battery will last longer if you're following these simple guidelines for charging and storing:
A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
B. Recharge and store the unit within the temperature range of 5°C-35°C (40°F-95°F).
C. Do not charge longer than 24 hours. Excessive charging or running the unit without battery fully drains will damage battery.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

LOCATION OF CONTROLS:

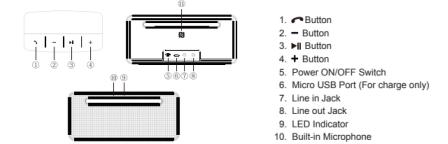

OPERATION:

- BT (BLUETOOTH): BT PAIRING THROUGH NFC (Near Field Communication): First time use or re-pairing the unit to a new BT Device, pair through the NFC as follows:
1. Make sure your external Bluetooth device is equipped with NFC and the function is set to ON.
2. Set the BT on your external device to "discovery mode", this will make your unit visible to other nearby BT devices.
3. Slide the Power ON/OFF Switch to ON position on the rear of unit to turn it ON.
4. Wake up your external BT device then place it on the NFC Sensor of the unit.
5. A few seconds later, a small window with a pairing request will pop up on the external BT Device's display.



- 5. A few seconds later, a small window with a pairing request will pop up on the external BT Device's display.
6. After pairing is complete, the Blue Indicator will stop blinking. Pull away the external BT device from the unit then start playing music.

During playback:

- Press the M Button on the unit to pause, press again to resume normal playback.
Press and hold the + or - Buttons on the unit to adjust volume level as desired.
Press and release the + or - Buttons on the unit to skip tracks.
If the unit is paired to a Cell Phone and a call is incoming during active music session, press the M Button to pause the music playback then speak to the built-in microphone to answer the call.
When your call is complete, press the M Button to disconnect or end the call and resume to music playback.
When finished listening, slide the Power ON/OFF Switch to OFF Position to shut off the unit.

IMPORTANT:

- The NFC System "Apple Pay" of most iPhone; iPad is NOT matching the NFC System of this unit.
If your BT Device can NOT paired to the unit through NFC, it may be the NFC system of it is not matching our unit. Connect it to the unit through the normal BT (Bluetooth) connection as the section "BT PAIRING MANUALLY" follows.

Normal operation after pairing:

- Slide the Power ON/OFF Switch to ON position on the rear of unit to turn it ON. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
Wake up your external BT Device then place it on the NFC Sensor of the unit.
Wait a few seconds until the unit is automatically paired to the external BT Device.
After paired, pull away the BT Device from the unit then begin playing music or answering calls as usual.

BT PAIRING MANUALLY:

- If your external BT Device does not have a NFC (Near Field Communication) function, pair it to the unit manually before first time use (or re-pairing to a new BT Device) following the instructions below:
1. Slide the Power ON/OFF Switch to ON position on the rear of unit to turn it ON. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT device.
4. During playback:
Press the M Button on the unit to pause, press again to resume normal playback.
Press and hold the + or - Buttons on the unit to adjust volume level as desired.
Press and release the + or - Buttons on the unit repeatedly to skip tracks.
If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the M Button to pause the music playback then speak to the built-in microphone to answer the call.
When your call is complete, press the M Button to disconnect or end the call and resume to music playback.
When finished listening, slide the Power ON/OFF Switch to OFF position to shut off the unit.

NOTES:

- When the external BT Device searched the unit, our model number "MMA3630" will appear on the display of external BT Device.
If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- Slide the Power ON/OFF Switch to ON position on the rear of unit to turn it ON. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the front of unit will illuminate and blink.
Wait a few seconds until the unit is automatically paired to the external BT Device.
After pairing is complete you may now play music and answer calls with your external BT Device.

LINE IN:

- In power on mode, connect the 3.5mm stereo plug from the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
Connect the other end to the Line In Jack on the rear of unit as the illustrated follows. The unit will enter to Line in mode automatically. The color of the Indicator will turn to Green.



- Play the music on the connected Player as usual. (Make sure the volume level of the connected music Player is turned to high level.)
Press and hold the + or - Buttons on the unit to adjust volume level as desired.
When no longer in use, slide the Power ON/OFF Switch to OFF position to shut off the unit.

NOTE: If the Audio Connection Cable was plugged in the Line In Jack, the BT function will auto cut. Unplug the Cable from the Line In Jack before use BT function.

LINE OUT:

- To listen the BT music from external speakers/amplifier:
1. In BT mode, connect the 3.5mm stereo plug from the supplied Audio Connection Cable to the AUX In/Line In Jack on the external speakers/amplifier.
2. Connect the other end to the Line out Jack on the rear of unit as the illustrated follows. The unit will automatically switch to Line out mode and sound from speakers will be automatically cut.



- Press and hold the + or - Buttons on the unit (or using the volume control system of the connected external speaker/amplifier) to adjust volume level as desired.
When no longer in use, slide the Power ON/OFF Switch to OFF position to shut off the unit.

NOTE: Line out is operate in BT Mode only.

TROUBLESHOOTING:

Table with 3 columns: Can't power on, No sound or sound weak, Sound distortion, BT not functioning, NFC not functioning. Rows describe symptoms and provide troubleshooting steps.

GENERAL SPECIFICATION:

Table with 2 columns: Specification (Power Source, BT Version, BT Effective range, etc.) and Value (Built-in DC 2200 mAh, 4.0, Up to 32 feet, etc.).

ACCESSORIES:

- 1 x User's Manual
1 x USB Connection Cable (For charge only)
1 x Audio Connection Cable with 3.5mm Stereo Mini Plugs
1 x USB Charger (Input: AC 100-240V~, 50/60 Hz, 0.2A Max; Output: DC 5V; 1A)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange...

Craig Electronics Inc. 1160 NW 163 Drive Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center.

NOTE: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V.

To Obtain Service on your Product email: service@craigelectronics.com

Printed in China MMA3630_WC_E0F1K_B0WU