

SIZE: 115x165mm

MAGNAVOX

PORTABLE SPEAKER with NFC and Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3629

IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

FCC NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

FCC NOTICE: To assure continued compliance, follow the attached installation instructions and use only shielded cables when connection to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1. Read these instructions. All the safety and operating instructions should be read before the product is operated.
2. Keep these instructions. The safety and operating instructions should be retained for future reference.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock.

3. Heed all warning. All warnings on the product and in the operating instructions should be adhered to.

4. Follow all instructions. All operating and use instructions should be followed.

5. Do not use this apparatus near water. Do not use the product near water and moisture. For example, near a bathtub, washbowl, kitchen sink and laundry tub, in a wet basement, or near a swimming pool.

6. Clean only with dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

 
15. Power Source. The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

16. Power lines. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17. Overloading. Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18. Object and liquid entry. Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19. Outdoor antenna grounding. If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges or built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

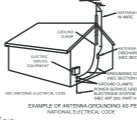

20. Service. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Replacement parts. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer of those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

22. Safety check. Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operation condition.

23. Wall or ceiling mounting. The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

 
24. Damage requiring service. Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
b. If liquid has been spilled or objects have fallen into the product.
c. If the product has been exposed to rain or water.
d. If the product does not operate normally by following the operating instructions.
e. If the product has been dropped or the cabinet has been damaged.
f. When the product exhibits a distinct change in performance- this indicates a need for service.

25. Note to CATV system installer. This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding, and in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.


Note: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

POWER SOURCE: The unit has a built-in Li-Ion rechargeable battery, recharge it before use or when it is drained as follows: 1. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port on the rear of unit. 2. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the supplied USB Charger (During charging, the Red Indicator on the top of unit will illuminate. When finished, it will turn off). (If the power of the battery is less than 10%, the Red indicator will illuminate and blink. Then recharge the unit immediately.)

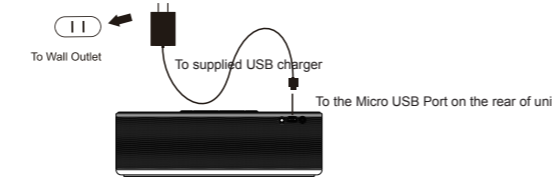

NOTES: Your battery will last longer if you're following these simple guidelines for charging and storing. A. Before first time use, charge it approximately 4 hours until the unit is fully charged. B. Recharge and store the unit within the temperature range of 5°C-35°C (40°F-95°F). C. Do not charge longer than 24 hours. Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged. D. Battery life naturally shortens slowly over time. E. The rechargeable battery incorporated in this product is not user replaceable.

 LOCATION OF CONTROLS:

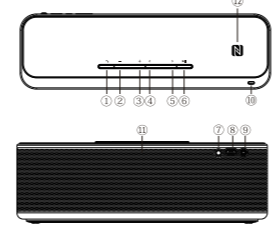


- 1. Power Button
2. Stop Button
3. Play/Pause Button
4. Previous Button
5. Next Button
6. Volume Up Button
7. AUX IN Jack
8. Micro USB Port (For charge only)
9. Power ON/OFF Button
10. LED Indicators
11. Built-in Microphone
12. NFC (Near Field Communication) Sensor

OPERATION: BT (Bluetooth):

BT PAIRING THROUGH NFC (Near Field Communication): First time use or re-pairing the unit to a new BT Device, pair through the NFC as follows:

 - 1. Make sure your external bluetooth device is equipped with NFC and the function is set to ON.
2. Set the BT on your external device to "discovery mode", this will make your unit visible to other nearby BT devices.
NOTE: For details on how to activate "NFC" or "Discovery Mode" on your external BT device please refer to that unit's instructions manual.
3. Power on the unit by pressing and holding the Power ON/OFF Button on the rear of unit approximately 3 seconds. The unit will enter in to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink.
4. Wake up your external BT Device then place it on the NFC Sensor of the unit. (Locate the NFC logo on the top right of your speaker.)
NOTE: Make sure the NFC Sensor of your BT Device is placed on the top of the NFC Sensor of the unit. Otherwise, the unit may not detect your BT Device. If you don't know where the location of NFC Sensor is located on your external BT device, please check the User's Manual or consult the retail store where your device was purchased.



- 5. A few seconds later, a small window with a pairing request will pop up on the external BT Device's display. Then start pairing following the on screen instructions from the external BT Device.
NOTE: Our model number "MMA3629" may appear on the BT Device's display.
6. After pairing is complete, the Blue Indicator will stop blinking. Pull away the external BT Device from the unit then start playing music.
7. During playback:
- Press the Play/Pause Button on the unit to pause, press again to resume normal playback.
- Press the + or - Buttons on the unit to adjust volume level as desired.
- Press the < or > Buttons on the unit to skip tracks.
8. If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the Play/Pause Button to pause the music playback then speak to the built-in microphone to answer the call. When your call is complete, press the Play/Pause Button to disconnect or end the call and resume to music playback.
9. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

IMPORTANT!: The NFC System "Apple Pay" of most iPhone, iPad is NOT matching the NFC System of this unit. If your BT Device can NOT paired to the unit through NFC, it maybe the NFC system of it is not matching our unit. Connect it to the unit through the normal BT (Bluetooth) connection on the page 3.

Normal operation after paired: 1. Power on the unit by pressing and holding the Power ON/OFF Button on the rear of unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink. 2. Wake up your external BT Device then place it on the NFC Sensor of the unit. 3. Wait a few seconds until the unit is automatically paired to the external BT Device. (The Blue Indicator will stop blinking). 4. After paired, pull away the BT Device from the unit then begin playing music or answering calls as usual.


BT PAIRING MANUALLY: If your external BT Device does not have a NFC (Near Field Communication) function, pair it to the unit manually before first time use (or re-pairing to a new BT Device) following the instructions below:

- 1. Power on the unit by pressing and holding the Power ON/OFF Button on the rear of unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. After paired, the unit will sound a prompt tone and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer calls with your external BT Device.
4. During playback:
- Press the Play/Pause Button on the unit to pause, press again to resume normal playback.
- Press the + or - Buttons on the unit to adjust volume level as desired.
- Press the < or > Buttons on the unit to skip tracks.
5. If the unit is paired to a Cell Phone and a call is incoming during an active music session, press the Play/Pause Button to pause the music playback then speak to the built-in microphone to answer the call. When your call is complete, press the Play/Pause Button to disconnect or end the call and resume to music playback.
6. When finished listening, press and hold the Power ON/OFF Button to shut off the unit.

NOTES: When the external BT Device searched the unit, our model number "MMA3629" will appear on the display of external BT Device. If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing: 1. Power on the unit by pressing and holding the Power ON/OFF Button on the rear of unit approximately 3 seconds. The unit will enter to BT (Bluetooth) mode automatically. The Blue Indicator on the top of unit will illuminate and blink. 2. Wait a few seconds until the unit is automatically paired to the external BT Device. (The Blue Indicator will stop blinking). 3. After pairing is complete you may now play music and answer calls with your external BT Device.

 AUX IN: To listen from an external Audio Player such as a MP3 Player, Discman ...etc. 1. Connect one end of the supplied Audio Connection Cable to the AUX IN Out/Line Out/Phone Jack on the external Audio Player. 2. In power on mode, connect the other end of the cable to the AUX IN Jack on the rear of unit as the figure below. The unit will turn to AUX IN mode automatically. The color of the Indicator will turn to Green.

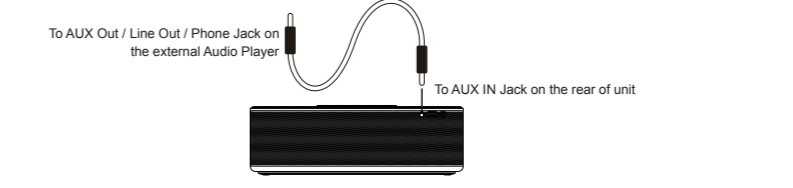

- 3. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
4. Press the + or - Buttons to adjust the volume level as desired.
5. When no longer in use, press and hold the Power ON/OFF Button to shut off the unit.

NOTE: If the Audio Connection Cable was plugged into the AUX IN Jack, the Bluetooth function will auto cut. Unplug the Cable from the AUX IN Jack before use Bluetooth function.

TROUBLESHOOTING table with columns for symptoms (Can't power on, No sound or sound weak, Sound distortion, BT not functioning, NFC not functioning) and solutions (Recharge the battery, Increase the volume, etc.).

GENERAL SPECIFICATION table with columns for Power Source, BT Version, BT Effective range, NFC Frequency, NFC Protocol, Audio Power, Impedance of speaker.

- ACCESSORIES: 1 x User's Manual, 1 x USB Connection Cable (For charge only), 1 x Audio Connection Cable with 3.5mm Stereo Mini Plugs, 1 x USB Charger (Input: AC 100-240V~, 50/60Hz, 0.2A Max; Output: DC 5V, 1A)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange, or pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$15 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc. 1160 NW 163 Drive Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc. and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product email.service@craigelectronics.com

Printed in China

MD3629_WC_E0FK1_B0WU