

SIZE: 70x158mm

MAGNAVOX

STEREO PORTABLE SPEAKER with Bluetooth® Wireless Technology

OWNER'S MANUAL

MODEL: MMA3742

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

 
FCC STATEMENT

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS

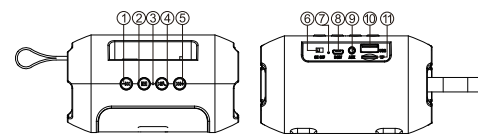

- 1. Power ON/OFF Switch
2. M (Mode) Button
3. Microphone
4. Play/Pause Button
5. Next/Previous Button
6. Power ON/OFF Switch
7. Indicators
8. DC 5V (Micro USB) Port (For charging only)
9. AUX (Aux/Line In) Jack
10. USB Port
11. TF (Micro SD Card) Slot

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

- 1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Micro USB) Port on the rear of unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Indicator on the rear of unit will illuminate. When charging is complete, it will turn off.
4. During charging, you can also play and listen to music at the same time.



To DC 5V (Micro USB) Port any USB Charger

NOTES:

- Your battery will last longer if you follow these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 2 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
C. Do not overcharge (longer than 24 hours). Excessive

OPERATION:

charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

General Operation:

- 1. Recharge the built-in Li-ion battery as previously instructed.
2. Slide the Power ON/OFF Switch on the rear of unit to "ON" position to power on the unit. The Blue Indicator on the rear of unit will illuminate.
3. Press the M (Mode) Button repeatedly to switch to desired playback mode. The unit will sound a prompt with you selection (see list below):

Table with 2 columns: Playback Modes and Voice Prompt. Rows include BT (Bluetooth), AUX (Aux/Line in), USB, and TF (Micro SD) Card.

Note: If the Micro SD Card and/or USB Device had NOT been inserted into the unit, the correspondence selection will not be available.

- 4. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback.
- In AUX mode, press it to mute the sound, press again to turn the sound back.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
- Press and hold the Next/Previous buttons repeatedly to skip tracks.
- When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

BT Mode:

BT (Bluetooth) pairing: First time use or re-pairing the unit to a new BT Device, pair as follows:

- 1. Power on the unit and enter to BT mode as previously instructed.
- You will hear an audible prompt say "Bluetooth ready for connection".

- The Blue Indicator on the rear of unit will blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
3. If pairing is complete you may now play music and answer the phone with your external BT Device.

- 4. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
- Press and hold the Next/Previous buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone:
- If a call is incoming during an active music session:
 - Press the Play/Pause Button then speak to the Microphone to answer the call. When your call is complete, press the Play/Pause Button to disconnect or end the call and resume to music playback.
 - Or, press and hold the Play/Pause Button approximately 1 second to decline the incoming phone call then resume to music playback.
- Quick press the Play/Pause Button twice to redialing the last telephone number your cell phone had dialed.

Table with 2 columns: Playback Modes and Voice Prompt. Rows include BT (Bluetooth), AUX (Aux/Line in), USB, and TF (Micro SD) Card.

Note: If the Micro SD Card and/or USB Device had NOT been inserted into the unit, the correspondence selection will not be available.

- 4. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback.
- In AUX mode, press it to mute the sound, press again to turn the sound back.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
- Press and hold the Next/Previous buttons repeatedly to skip tracks.
5. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

 
Normal operation after pairing:

- 1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. You will hear an audible prompt say "Bluetooth ready for connection" and the Blue Indicator on the rear of unit will blink.
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue Indicator will stop blinking.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

AUX (AUX/ LINE IN):

To listen from an external Audio Player such as MP3 Player, Discman...etc.


- 1. In power off mode, connect one end of supplied Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the other end to the AUX (Aux/Line In) Jack on the rear of unit as illustrated below:



- 3. Power on the unit and enter to AUX mode as previously instructed, you will hear an audible prompt say "Line In".
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
- Press the Play/Pause button to mute the sound, press again to turn the sound back.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
6. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

USB:

 - To play music in a USB Device:
1. In power off mode, connect the USB Device into the USB Port on the rear of unit as illustrated below:




- 2. Power on the unit and enter to USB mode as previously instructed, you will hear an audible prompt say "USB". Music in the USB Device will be playback automatically.
3. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
- Press and hold the Next/Previous buttons repeatedly to skip tracks.
4. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

Micro SD Card:

To play the music in TF (Micro SD) Card:

 - 1. In power off mode, insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the rear of unit with contacts facing up as illustrated below:

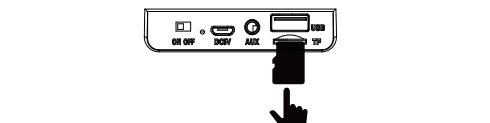

- 2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed, you will hear an audible prompt say "Memory Card". Music in the card will be playback automatically.
3. During playback:
- Press the Play/Pause Button to pause; press again to resume to normal playback.
- Press and release the Next/Previous buttons repeatedly to adjust volume level as desired.
- Press and hold the Next/Previous buttons repeatedly to skip tracks.
4. When finished listening, slide the Power ON/OFF Switch to "OFF" position to shut off the unit.

Notes:

- Up to 16 GB TF (Micro SD) Card /USB Device supported.
When inserting the TF (Micro SD) Card /USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card /USB Device or the unit. If it doesn't work, please check if the direction is correct.
Before replacing TF (Micro SD) Card /USB Device, make sure the unit has been powered off.
You also need to download the desired music in MP3 format into the TF (Micro SD) Card /USB Device before inserting into the unit.

TROUBLESHOOTING:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, and POSSIBLE SOLUTION. Rows include issues like 'Can't power on', 'No sound or sound weak', 'Sound distortion', and 'BT not functioning'.

GENERAL SPECIFICATIONS:

Table with 2 columns: Specification Name and Value. Rows include Power Source, Impedance of Speakers, Audio Power, BT Version, and BT Operation Distance.

PACKAGE INCLUDES:

- 1 x Owner's Manual
1 x USB Connection Cable (For Charging only)
1 x Audio Connection Cable with 3.5 mm Stereo Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33269

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART, VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product email:service@craigelectronics.com

Printed in China MMA3742_WC_E0FK1_B0US